

BN113SS	CESCO 1 Gang 13 Amp Black Nickel Switched Socket	20
BN13SSUN	CESCO 13A Black Nickel Switched Fused Spur c/w Neon	135
BN1400D/2	CESCO 1 Gang 2 Way 400W Black Nickel Dimmer	56
BN1LS2	CESCO 1 Gang 2 Way Black Nickel Switch	175
BN1TS	CESCO 1 Gang Black Nickel Telephone Socket	322
BN1TV	CESCO 1 Gang Black Nickel TV Socket	341
BN20DPSN	CESCO 20A Black Nickel Double Pole Switch c/w Neon	323
BN213SS	CESCO 2 Gang 13 Amp Black Nickel Switched Socket	275
BN2400D/2	CESCO 2 Gang 2 Way 400W Black Nickel Dimmer	33
BN245SN	CESCO 2 Gang 45 Amp Black Nickel Cooker Switch	201
BN2LS2	CESCO 2 Gang 2 Way Black Nickel Switch	162
BN3LS2	CESCO 3 Gang 2 Way Black Nickel Switch	44
BN4LS2	CESCO 4 Gang 2 Way Black Nickel Switch	15
BNINTS	CESCO 10 Amp Intermediate Black Nickel Switch	110
BR113SS	CESCO 1 Gang 13 Amp (13A) Brushed Chrome Switched Socket	7
BR1250D/1	CESCO 1 Gang 1 Way 250W (250 Watts) Brushed Chrome Dimmer	5
BR13SSUN	CESCO 13 Amp (13A) Brushed Chrome Switched Fused Spur + Neon	15
BR1400D/2	CESCO 1 Gang 2 Way 400W (400 Watts) Brushed Chrome Dimmer	4
BR145S	CESCO 1 Gang 45 Amp (45A) Brushed Chrome Cooker Switch	1
BR1GSS	CESCO 1 Gang 13 Amp (13A) Brushed Chrome Switched Socket	1
BR1LS2	CESCO 1 Gang 2 Way Brushed Chrome Switch	17
BR1TS	CESCO 1 Gang Brushed Chrome Telephone Socket	92
BR1TS2	CESCO 1 Gang 2 Way Brushed Chrome Toggle Switch	8
BR1TV	CESCO 1 Gang Brushed Chrome TV Socket	23
BR20DPSN	CESCO 20 Amp (20A) Brushed Chrome Double Pole Switch + Neon	10
BR2250D/1	CESCO 2 Gang 1 Way 250W (250 Watts) Brushed Chrome Dimmer	11
BR2250D/2	CESCO 2 Gang 2 Way 250W (250 Watts) Brushed Chrome Dimmer	12
BR2400D/2	CESCO 2 Gang 2 Way 400W (400 Watts) Brushed Chrome Dimmer	13
BR2GSS	CESCO 2 Gang 13 Amp (13A) Brushed Chrome Switched Socket	12
BR2LS2	CESCO 2 Gang 2 Way Brushed Chrome Switch	7
BR2TS2	CESCO 2 Gang 2 Way Brushed Chrome Toggle Switch	100
BR3LS2	CESCO 3 Gang 2 Way Brushed Chrome Switch	36
BR4LS2	CESCO 4 Gang 2 Way Brushed Chrome Switch	24
BR4TS2	CESCO 4 Gang 2 Way Brushed Chrome Toggle Switch	81
K113SS	CESCO 1 Gang 13 Amp (13A) Rope Edge Brass Switched Socket	27
K13SSUN	CESCO 13 Amp (13A) Rope Edge Switched Fused Spur c/w Neon	37
K1400D2	CESCO 1 Gang 2 Way 400W Rope Edge Brass Dimmer	31
K145S	CESCO 1 Gang 45 Amp (45A) Rope Edge Brass Cooker Switch	107
K1LS2	CESCO 1 Gang 2 Way Rope Edge Brass Switch	100
K1TS	CESCO 1 Gang Rope Edge Brass Telephone Socket	171
K1TV	CESCO 1 Gang Rope Edge Brass TV Socket	158
K20DPSN	CESCO 20 Amp (20A) Rope Edge Brass Double Pole Switch & Neon	14
K213SS	CESCO 2 Gang 13 Amp (13A) Rope Edge Brass Switched Socket	10
K2250D/1	CESCO 2 Gang 1 Way 250W (250 Watts) Rope Edge Brass Dimmer	64
K2250D/2	CESCO 2 Gang 2 Way 250W (250 Watts) Rope Edge Brass Dimmer	195
K245SN	CESCO 2 Gang 45 Amp (45A) Rope Edge Cooker Switch c/w Neon	258
K2LS2	CESCO 2 Gang 2 Way Rope Edge Brass Switch	87
K3LS2	CESCO 3 Gang 2 Way Rope Edge Brass Switch	60
K4LS2	CESCO 4 Gang 2 Way Rope Edge Brass Switch	61
K4TS2	CESCO 4 Gang 2 Way Rope Edge Brass Toggle Switch	40
PS13SSUN	CESCO 13 Amp (13A) Polish Chrome Switch Fused Spur c/w Neon	8
PS1400D/2	CESCO 1 Gang 2 Way 400W (400 Watts) Polished Chrome Dimmer	90
PS1GSS	CESCO 1 Gang 13A Flat Polished Chrome Switch Socket	1
PS1LS2	CESCO 1 Gang 2 Way Polished Chrome Switch	61
PS1NTS	CESCO 1 Gang 2 Way Intermediate Polished Chrome Switch	1
PS1TS	CESCO 1 Gang Polished Chrome Telephone Socket	7